T5 Slave LED Tube (Dial up preset mode)

Model: LT-R512-SL-BT

Wireless Feature

- 1. Dial-up preset mode: The design focus on the automatic zone lighting system. Set the Dial Up switches in both the Master & Slave Tubes before the installation, then the automatic zone lighting is established after the tube installation.
- 2. The system is mainly for the zone lighting control. When moving object is detected, Master Tube will be turned on 100%, and the Slave Tube set to the same zone of the Master Tube will follow the Master Tube to be turned on 100%. When the moving object goes away, the Slave tubes will follow the Master Tube dim to the preset value.
- 3. Master Tube is built-in moving object sensor & transmitter. Slave Tube is built-in a receiver.
- 4. T8 tube body with T5 pin to suit for the T5 fitting (bracket).










Group **GP1-15**



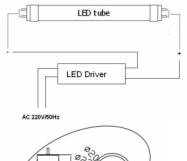

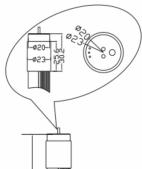

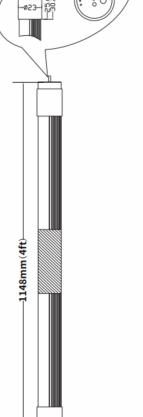

DC Tube

Standard Size(mm) Ø20*1148mm

Material AL6063+PC

Power (W) 16W

Voltage(V) DC 30-42V

Beam Angle 180 degree

Luminous Efficacy 120 Im/W

Total Lumen 1920Im

Color Temp 3000K / 4000K / 6000K

CRI >80

Standard (Driver)

Input(v) AC 100-240V

Output(v) DC 30-42V

400mA **Output Current**

> 0.9 Power Factor

2.4GHz Bluetooth 4.0 **Dimming Signal** 15 Group (ID 01-15) Slave Group ID

Dimming Level Control by Master tube dimming value